

VARROA-WARRIOR


1



Step 1: Prepare the Device

Place paper at the bottom of the stainless-steel container. Place the container at the bottom of the device. Move the support profile according to the size of the honeycomb frame used in hive and fix it by distance frame.


2

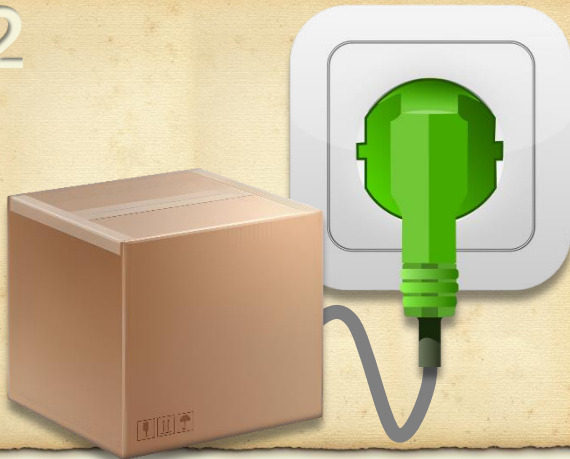

Step 2: Connect the Power

Close the lid of the device. Connect the power adapter and plug it into an electrical outlet. (Alternatively, you can use an external 12V/5A power source or a car battery.)


3

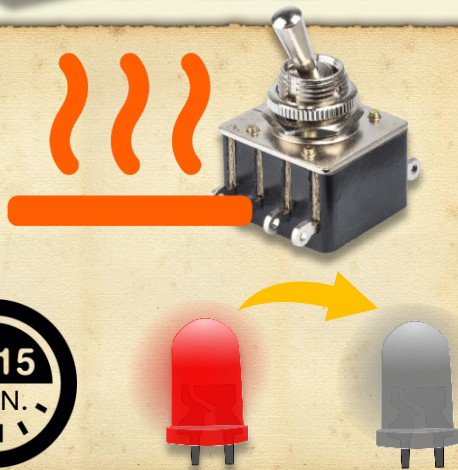

Step 3: Preheat

Set the switch to the PREHEAT position. Wait until the red LED turns off (approximately 15 minutes).

4

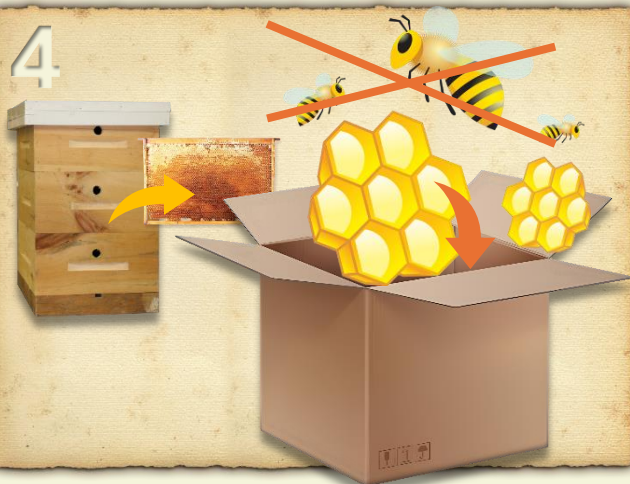

Step 4: Insert the Frames

Open the lid and place the bee brood frames with capped brood (without bees) into the device. Insert the temperature sensor into the centre of the frame.

VARROA-WARRIOR


5



Step 5: Dish with Water and Float

Place a dish on top of the frames, filling it halfway with distilled water. Place the float into the dish, and connect the other end to the USB port on the device.


6

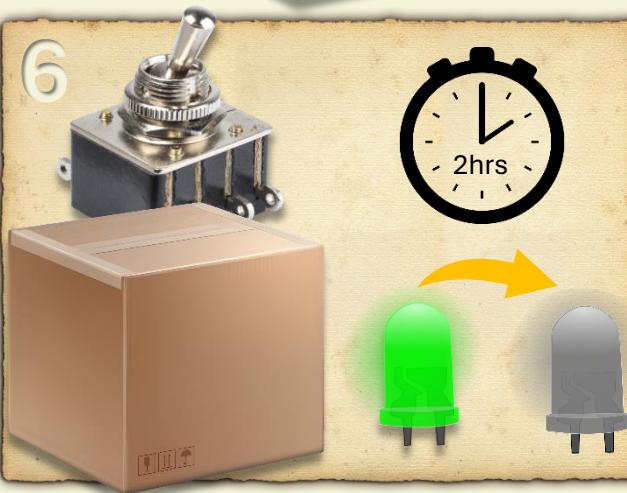

Step 6: Set the Timer

Close the lid of the device and set the switch to the TIMER position. After a few seconds, the thermal treatment process will start, indicated by a green LED. The red LED indicates heating, and the blue LED indicates wrapping.

7

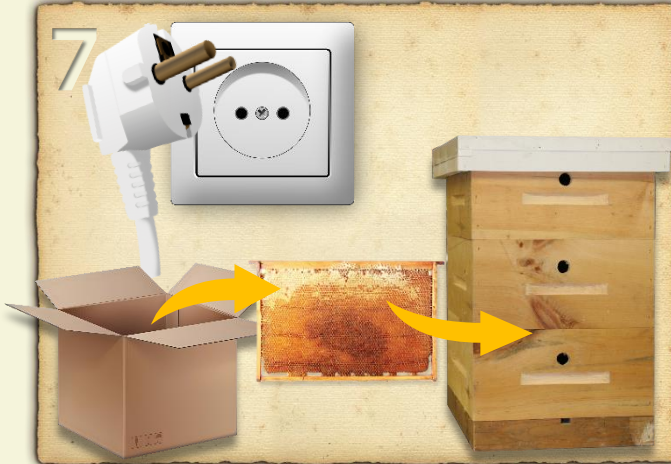

Step 7: End of Treatment

After ca 2 hours, when the green LED turns off, the process is complete. Disconnect the power, carefully open the lid, and remove the float, dish and temperature sensor. Return the treated frames to their original positions in hive.

8



Step 8: Clean the Device

Wipe the device with a damp cloth. You can wash the stainless-steel container in the dishwasher. After cleaning, leave the device to dry with the lid slightly open in a dry room.

VARROA-WARRIOR



Disclaimer:

This device is intended for the treatment of closed brood frames against Varroa Destructor L mites. Any use of the device should be done in accordance with the instructions provided. Always ensure the device is properly maintained and cleaned after each use. The manufacturer is not responsible for any misuse, damage, or harm resulting from improper handling, maintenance, or operation of the device. Use at your own risk. Keep out of reach of children and unauthorized personnel. Always consult with a professional if you are unsure about the device's use or maintenance.